


a. Orientation for current acting parallel to bank

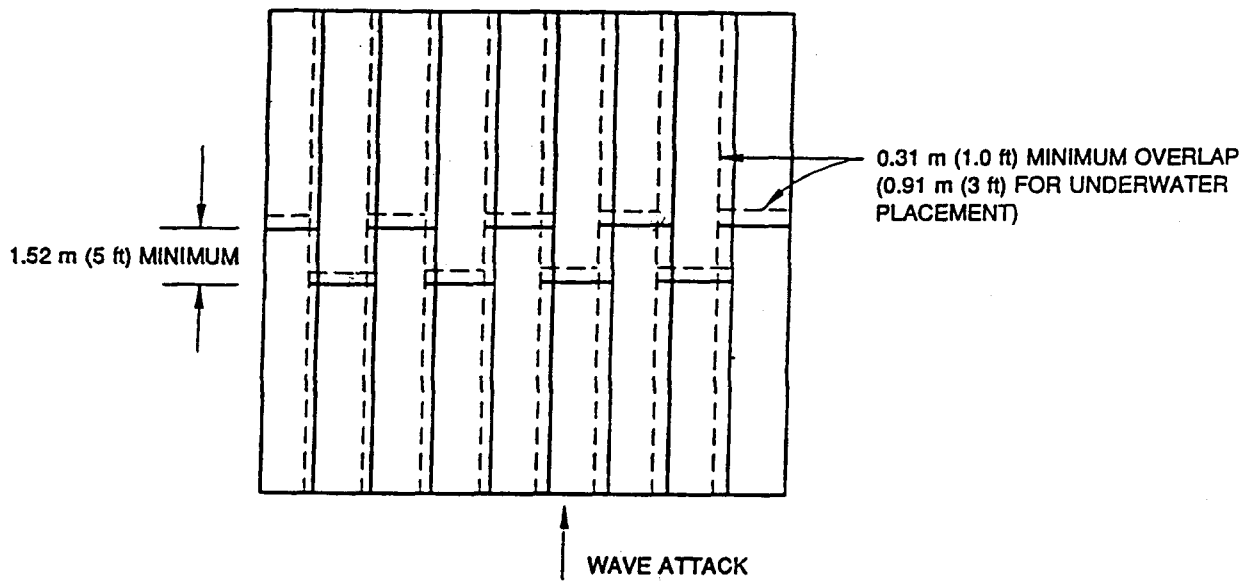

b. Orientation for wave attack normal to bank

Figure 1. Correct fabric placement for current acting parallel to bank or for wave attack on the bank

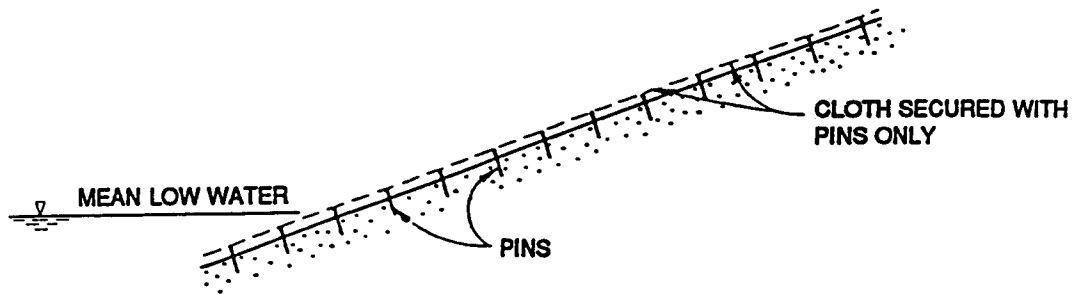


Figure 2. Placement of filter fabric on bank subject to streamflow action. Revetment materials have not yet been placed on the fabric.

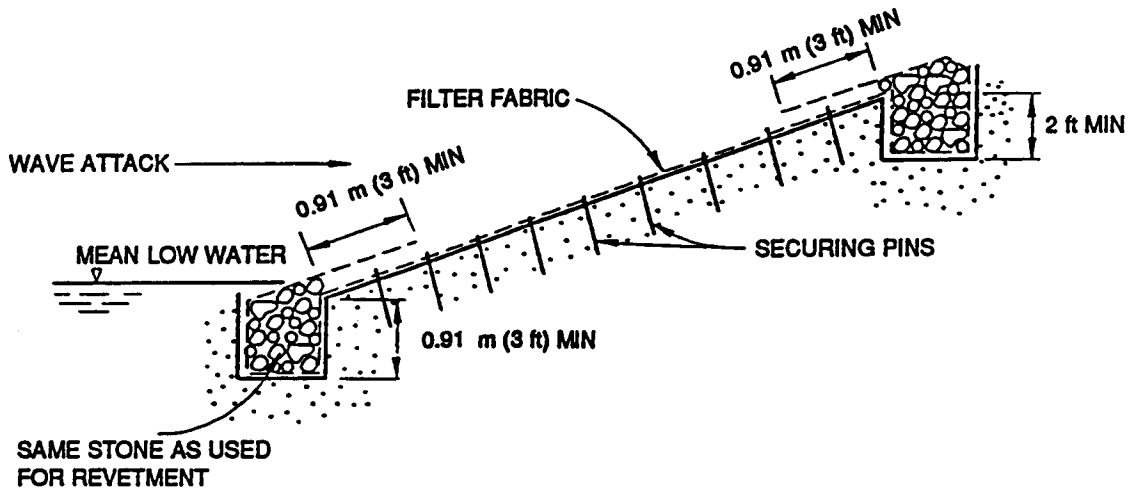


Figure 3. Filter fabric on bank subject to wave attack showing placement of vertical-wall key trench at toe and top bank. Revetment materials have not yet been placed on fabric.

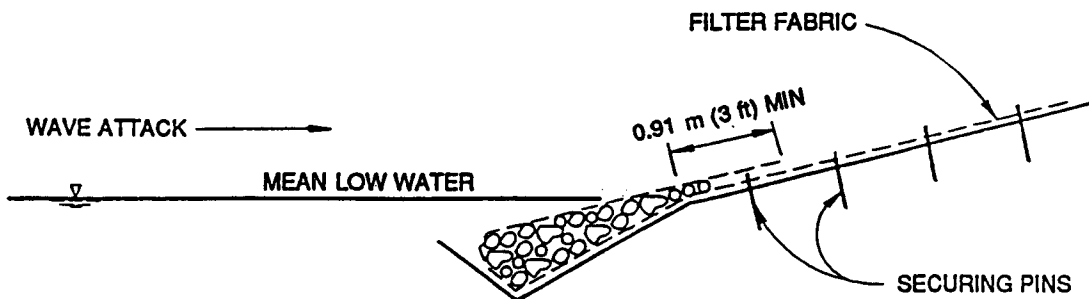


Figure 4. Key trench design used when soil conditions do not permit construction of vertical walls